


## Diversitrack and Diversimount Installation Tips

If you encounter potential mounting obstacles as you do classroom site visits, or if you have previously installed Diversitrack and would like to contribute a tip of your own, please give us your feedback at 1-800-995-3177 or via email at kevin@diversitrack.com.

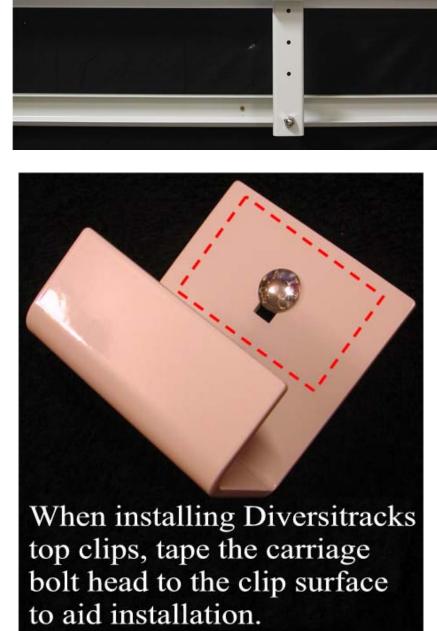

After frame assembly is complete, trial-fit the frame by resting the top rollers onto the top of the dry erase board frame. Note the relationship between the 5 Diversitrack clip mounting positions and your dry erase/chalk board tray illustrated below. The clip shown is installed in the upper most clip mounting position making the bottom of your interactive board even with the chalk tray. Adjust your track position accordingly to coincide with your desired clip position. After track installation you will still have a total of 10 inches of vertical adjustability.






The Diversitrack specification for chalk tray clearance, measured from the wall, is currently 4.25". While this has given us adequate clearance in 99% of cases, there are two ways to increase this if necessary.

Each roller stem has 1" of threaded space at the end. In this first example, using the rollers that come standard with each Diversitrack system, you can afford a little more space by backing the hex nut outward then completing the rest of the roller assembly.

If you need yet a little more, you can also remove the washer. We would recommend, in either case, using thread locker on the acorn nut on the reverse side and tighten firmly.

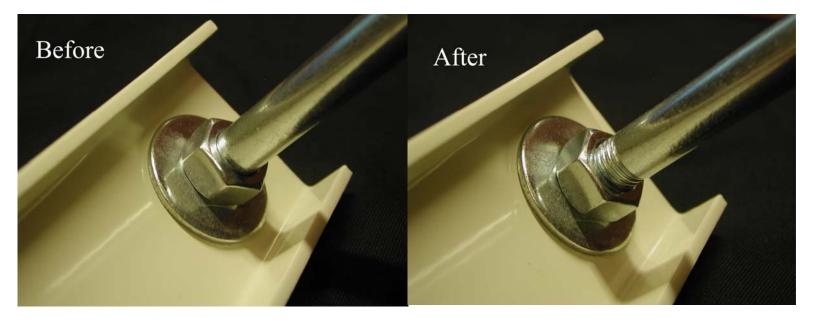

The second option is for your client to purchase the Diversitrack #DT-XLKIT which is an upgrade when ordering a Diverstirack system. At the factory, the standard 4" rollers are removed and the below illustrated 8" rollers are packaged in their place.

This is a perfect option for old construction where you have wide wooden chalk trays or the room was outfitted with a multiple sliding dry erase frame which is typically 5" - 6" out from the wall.

